


VG1000 IN-STORE ASSEMBLY


SELECT VALVE AND ACTUATOR

NON-SPRING RETURN

Position stem Port A open

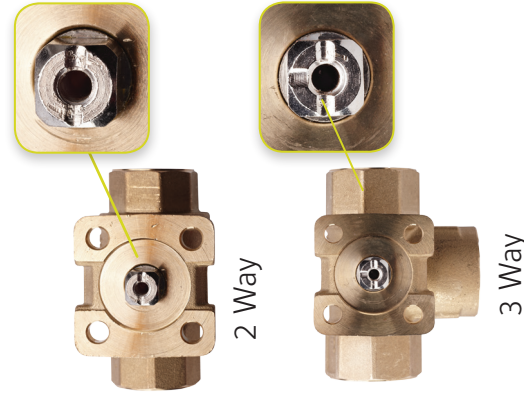

VA9104 and VA9300

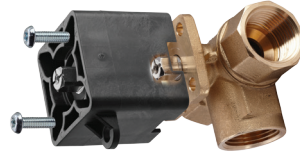

Assemble Thermal Barrier M9000-561 if needed.

Align stem mark with valve.



Adjust position of the handle on the actuator




Mount actuator to valve



Tighten here



For proportional control only: Set action type

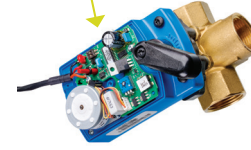


Set jumper here




SPRING RETURN

Position stem

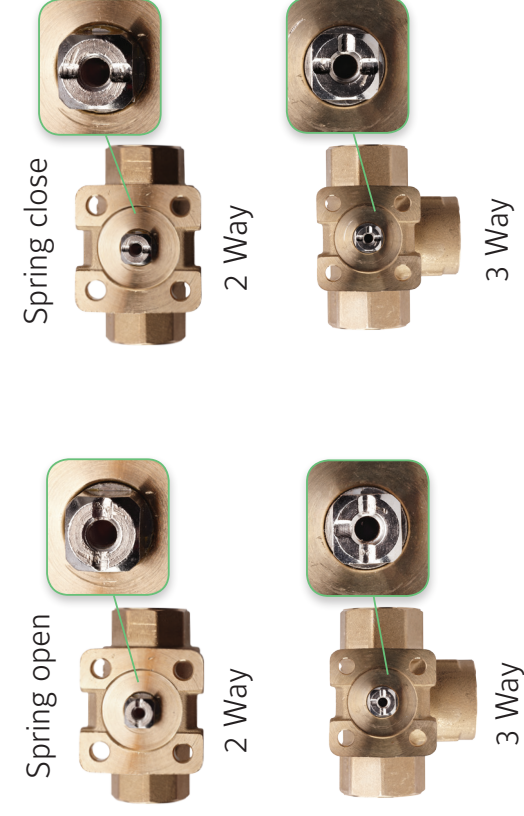

VA9203 and VA9208

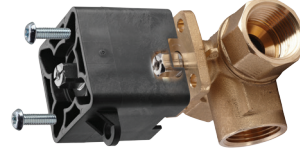


Assemble Thermal Barrier M9000-561 if needed.

Align stem mark with valve.



Choose side of actuator

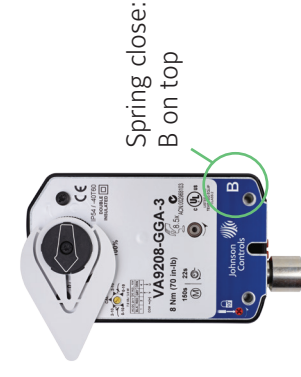

Remove linkage and install on other side



Mount actuator to valve



Tighten here

For proportional model set mode selection

Tools: T-20 Torx® driver

JOHNSON CONTROLS is a registered mark. Unauthorized use is strictly prohibited. All other marks are property of their respective owners.

Torx® drive system is a registered trademark of Acument Intellectual Properties, LLC.

© 2017 Johnson Controls P.O. Box 423, Milwaukee, WI 53201 Printed in the USA MISC-781 (Rev. 6/17) www.johnsoncontrols.com